


Work Order ID 131241

131241

Page 1

Item ID: D4011-5 **Accept** ***N900040100*** **Setup** **Start** ***NS1***
Revision ID: **Stop** ***NS2***
Item Name: Clamp, Short
Start Date: 3/31/15 **Start Qty:** 31.00 ***31*** **Cust Item ID:**
Required Date: 3/31/15 **Req'd Qty:** 31.00 ***31*** **Customer:**
Reference: ECN15-532

Approvals: **Process Plan:**  **Date:** _____ **Tooling:** _____ **Date:** _____ **Run** **Start** ***NR1***
QC: _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____ **Stop** ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D4011	C								

130 Form as per dwg 0.00

130

Brake NC

Brake NC

Memo

PULL FROM STK:
31 X D4011-3 B108458

0.00

 **DAS**
28
9-89 **MAR 31 2015**

SCRAP/DESTROY PER ECN15-532

160 QC21- Final Inspection - Work Order Release 0.00


160

QC

Quality Control

Memo

0.00

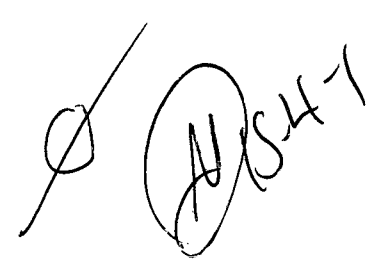

March-31-15 10:46:49 AM

131241

D4011-5

Required Date: 3/31/15

Required Qty: 31.00

IPP RevA: revB as per dwg 09.11.18 DD verified by:JLM IPP
Rev:B 11.05.19 MADE IN HOUSE DD verified by:EC

[illegible]